
## XCM25D Quick Start Guide

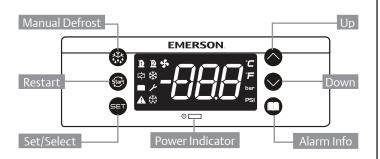

#### **Navigation**

Enter program mode\* ▼ + SET 3 seconds (F flash)

Cycle through options/adjust values △ ♥


Select funtion/store function SET

Exit program mode 🛆 + SET

## 1 Set the clock




The unit will flash rec the first time power is applied or if the clock has lost its setting.

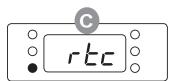

Press set to select the rec menu.



Press and hold ♥ + SET until \* flashes.

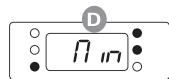


Use SET and △ ♥ buttons to select and adjust clock parameters.

### **Clock Parameters**

Par.	Description	Value Range
Піп	Minute	0-59
Нг	Hour	0-23
UGA	Day	1-31
Поп	Month	1- 12
УEr	Year	0-99

## 2 Set pressure controls

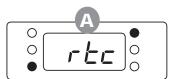

Press SET and  $\triangle$  to exit the real menu. If SET and  $\triangle$  are held, the control will exit program mode. Use  $\heartsuit$  and SET to return to program mode.



Use the  $\triangle$  or  $\nabla$  buttons to find the *PAr* menu, then press SET to select.



Use SET and △ ♥ buttons to select and adjust pressure parameters.


#### **Pressure Parameters**

Par.	Description	Value Range
[ '''	Cut In	10-135 (psi)
CoU	Cut Out	0-30 (psi)
rEF	Refrigerant	22, 134, 404, (4)07A, (4)07C,
		(4)07A, (4)07C,
		507 (may vary
		by model)

# 3 Set defrost parameters and schedule



From the PRr menu, use SET and △ ♥ buttons to select and adjust defrost parameters.

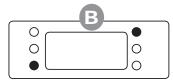

## **Defrost Parameters**

Par.	Description	Value Range			
ıdF	Interval between defrost	0- 120 (hours)			
NdF	Max duration	0-255 (minutes)			
EdF	Defrost mode	הט (off), והב (interval), רבב (clock)			
rq I	1st start time	// (not used)			
۲۹5	2nd start time				
rq3	3rd start time				
L <b>d</b> 4	4th start time	പ് (not used), മ- 23:50			
Ld5	5th start time				
Ld6	6th start time				



 $<sup>^{*}</sup>$  Program mode will terminate after 60 seconds of inactivity.

