


Facility Status Display (FSD) Ribbon Cable Installation


Overview

This technical bulletin describes the steps for the correct installation of the Facility Status Display (FSD) ribbon cable. In the event of incorrect positioning of the ribbon cable, the FSD may exhibit some communication problems such as rebooting or displaying a **Relay Board Missing** message. Should the FSD demonstrate this behavior, verify that the ribbon cable has been properly installed:

Correct Cable Position
Red Stripe At Top

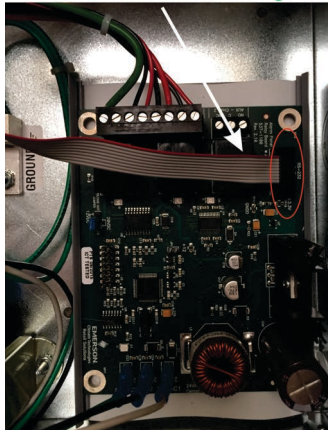

Incorrect Cable Position

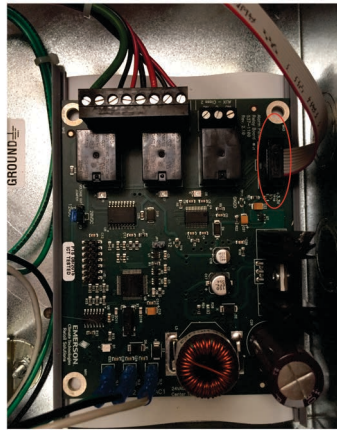

The ribbon cable should be positioned straight across the board and always have the red stripe along the top.

Should the ribbon cable need to be reinstalled, follow the Installation procedure.



FSD P/N 850-5100

Installation

1. Power down the FSD.
2. Using the four screws on the front of the mounting plate, unscrew the cover of the FSD and remove, exposing the back of the enclosure.
3. Once the top has been separated from the back of the enclosure, check the ribbon cable for proper installation and reposition if necessary.
4. Replace the mounting plate onto the enclosure and reattach using the four screws.
5. Cycle power to the unit.

**Refer to the FSD Installation and Operation Manual (P/N 026-1400) for more information*

Visit our website at copeland.com/en-us/products/controls-monitoring-systems for the latest technical documentation and updates.

For Technical Support call 833-409-7505 or email ColdChain.TechnicalServices@Copeland.com