

Supervisory Controller Password Standards for Login Security


The minimum password requirements for the E3 and Site Supervisor follow NIST 800.53 guidelines and are summarized as follows:

- Minimum of eight characters
- The ability to use all special characters but no special requirements to use them
- Restrict sequential and repetitive characters (for example, 123456 or aaaaaaa)
- Restrict commonly used passwords and dictionary words
- The password cannot contain the username within the password (added in 2.26F01)
- The password cannot contain the following context-specific words from the general system properties setup (added in 2.26F01):
 - Site Name
 - Unit Name
 - Group Name
 - Host Name
 - Domain Name



Supervisory Controller Login

1. Launch a preferred Web browser: Google Chrome 105.0.5195 and later, Firefox 105.0 and later, MAC Safari 14.1.2 and later, iOS Safari 14.7 and later, Microsoft Edge 84.0.522 and later, and Android Chrome/WebView 105.0.5195 and later are the supported browsers.
2. Enter the IP Address of the Supervisor.
3. Enter the Username/Password (default **user/pass**) and click **Login**. Update the password to the minimum complexity requirements and click **Save**. *Note that after the first login using the default user/pass, the password must be updated.*

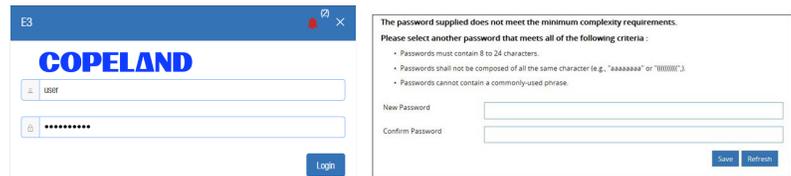

Supervisory Controller Login and Password Setup Example

Once logged in, clicking **Logout** will log users out of the system. After a specified period of idle time, users will be automatically logged out of the system.

Visit our website at copeland.com/en-us/products/controls-monitoring-systems for the latest technical documentation and updates. For Technical Support call **833-409-7505** or email ColdChain.TechnicalServices@Copeland.com