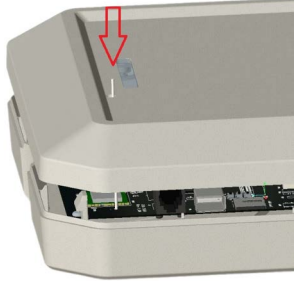
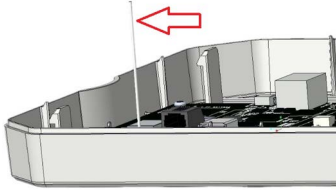
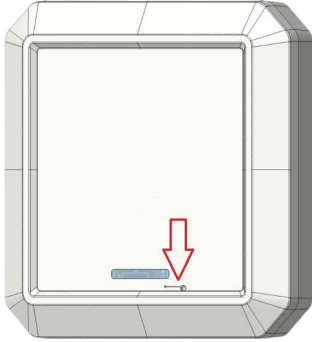


Wireless Gateway Antenna Positioning

For optimal performance, the Wireless Gateway (P/N 814-3550) antenna must be positioned perpendicular to the circuit board. Follow the instructions below to be sure the antenna is positioned correctly.

| | |
|---|--|
| <p>STEP 1: Remove the top of the enclosure from the base.</p> |  <p><i>Figure 1 - Remove the Top of the Enclosure</i></p> |
| <p>STEP 2: Verify the antenna is positioned perpendicular to the circuit board.</p> |  <p><i>Figure 1 - Antenna Positioned Perpendicular</i></p> |
| <p>STEP 3: Guide the antenna through the pre-made hole in the top of the enclosure and reattach the top to the base. Verify the antenna is exposed through the hole and positioned perpendicular outside of the enclosure.</p> |  <p><i>Figure 1 - Wireless Gateway Enclosure Front With Exposed Antenna</i></p> |

Visit our website at copeland.com/en-us/products/controls-monitoring-systems for the latest technical documentation and updates.

For Technical Support call 833-409-7505 or email ColdChain.TechnicalServices@Copeland.com