

Programmable Touchscreen Thermostat

Supervisor Version Compatibility

This bulletin includes all supported Programmable Touchscreen Thermostat versions in Supervisor.

*Indicates the Touchscreen Thermostat version is compatible with Supervisor version but will not have Fan "On" mode.



Table 1 - Touchscreen Thermostat and Supervisor Compatibility Matrix

Programmable Touchscreen Thermostat		Supervisor Version			
Fan Feature	Version	2.13	2.14	2.15	Above
Fan Mode - Cool, Heat, Auto	1.06	*	*	*	*
Fan Mode - Auto, On	1.07	*	*	✓	✓

Fan Mode Display - Version 1.06

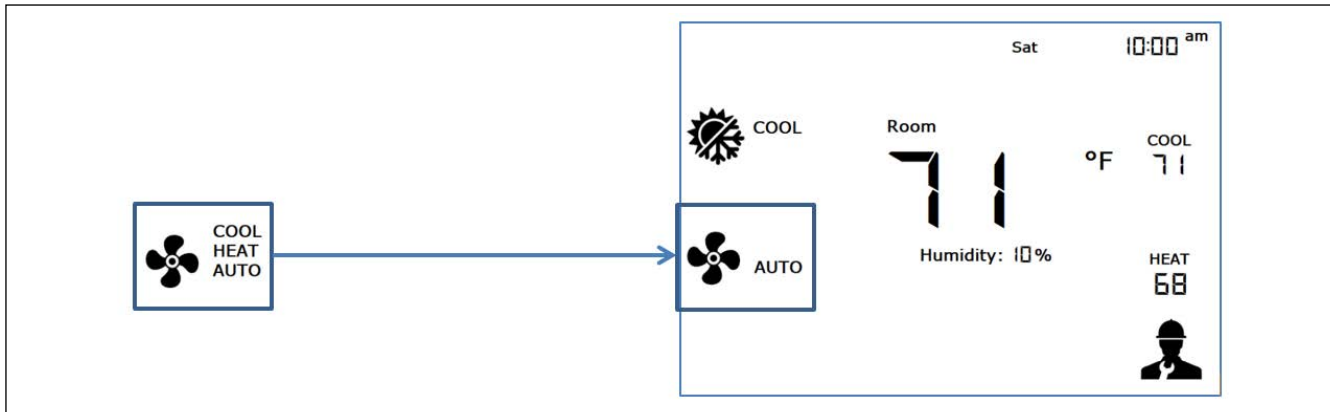


Table 2 - Version 1.06 Fan Mode Details

Fan Mode	Description
COOL	Fan will be activated when thermostat is in active cooling mode only.
HEAT	Fan will be activated when thermostat is in active heating mode only.
AUTO	Fan will be activated when thermostat is in either cooling or heating mode.

Fan Mode Display - Version 1.07

When FAN_MODE is AUTO:

- Fan icon is displayed.
- The text **AUTO** is displayed.
- The fan indicator (four dashes over the fan) is displayed according to heating or cooling status.






When FAN_MODE is ON:

- Fan icon is displayed.
- No text is displayed.
- The fan indicator (four dashes over the fan) will be displayed as long as the FAN_MODE is ON.



Table 3 - Version 1.07 Fan Mode Details

Fan Mode	Description	Output Activation	Output Display (on GUI)
AUTO	Fan will be activated when either cooling or heating call is active.	0% (OFF)	
		100% (ON)	
ON	Fan stays active (ON) independently of "Thermostat mode" or heating and cooling conditions.	100% (ON)	

Visit our website at copeland.com/en-us/products/controls-monitoring-systems for the latest technical documentation and updates.

For Technical Support call 833-409-7505 or email ColdChain.TechnicalServices@Copeland.com