




Copeland outdoor refrigeration unit X-Line series

Wind baffle attachment instructions

1. Ensure the unit is powered off; then, remove the side screws (circled in the photo shown below).
3. Begin screwing in the provided screws/washers. Start at the upper corners with the washer between the screw head and fan guard. It is recommended using an attachment on a screw driver to increase reach/ease of use.
4. Screw in the final four screws into the sides, attaching the wind baffle to the unit (example in the photo below).

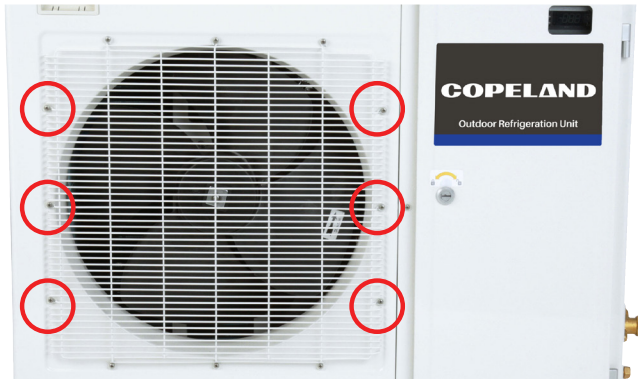

2. Set the wind baffle in the indentation between the fan guard and the unit by sliding from the top to the bottom.

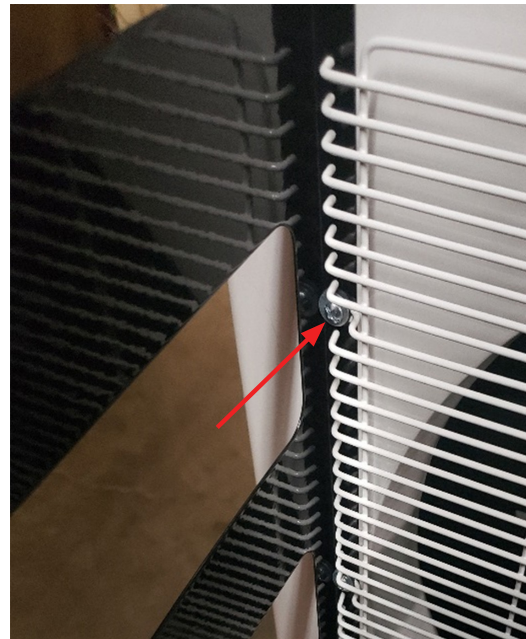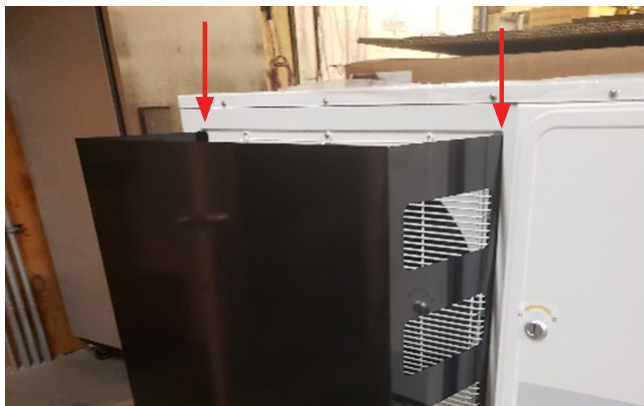

Visit our website at [copeland.com/en-us/tools-resources/online-product-information](https://www.copeland.com/en-us/tools-resources/online-product-information) for the latest technical documentation and updates.

For Technical Support call **833-409-7505** or email ColdChain.TechnicalServices@Copeland.com

The contents of this publication are presented for informational purposes only and they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. Copeland reserves the right to modify the designs or specifications of such products at any time without notice. Responsibility for proper selection, use and maintenance of any product remains solely with the purchaser and end-user.

This document may be photocopied for personal use.