MRLDS


Splash Guard Mounting Kit (P/N 603-1100)

This technical bulletin explains how to install the MRLDS Splash Guard Mounting Kit (P/N 603-1100). The MRLDS Splash Guard Mounting Kit (P/N 603-1100) includes the following components:

Part Number	Description
303-1126	MRLDS Cover Mounting Plate
102-0050	8-32, 1/2", Phillips, Self-tap Screw
303-1128	Sensor Splash Guard

Installation Instructions

- 1. Mount plate to gang box using the screws from the gang box cover. The plate (*P/N 303-1126*) can act as the gang box cover provided that the conduit entering the assembly is sealed, preventing air from outside the cooler/freezer from entering through the conduit.
- 2. Mount the MRLDS base to the plate (*P/N 303-1126*) using two of the included screws (*P/N 102-0050*). Two pilot holes are provided.
- 3. Wire the MRLDS Terminals and snap the sensor into the base.
- 4. Secure the Sensor Splash Guard (*P/N 303-1128*) to the plate using the remaining three screws, *P/N 102-0050*. Three pilot holes are provided, two on the sides at the top and one centered at the bottom.

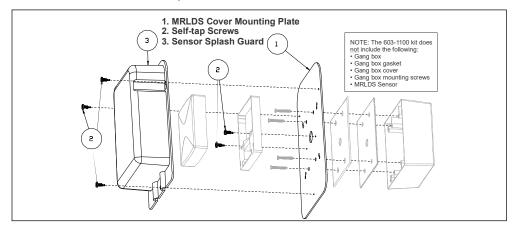

MRLDS Splash Guard Mounting Kit (P/N 603-1100) Installation Diagram

Visit our website at copeland.com/en-us/products/controls-monitoring-systems for the latest technical documentation and updates. For Technical Support call 833-409-7505 or email ColdChain.TechnicalServices@Copeland.com

